



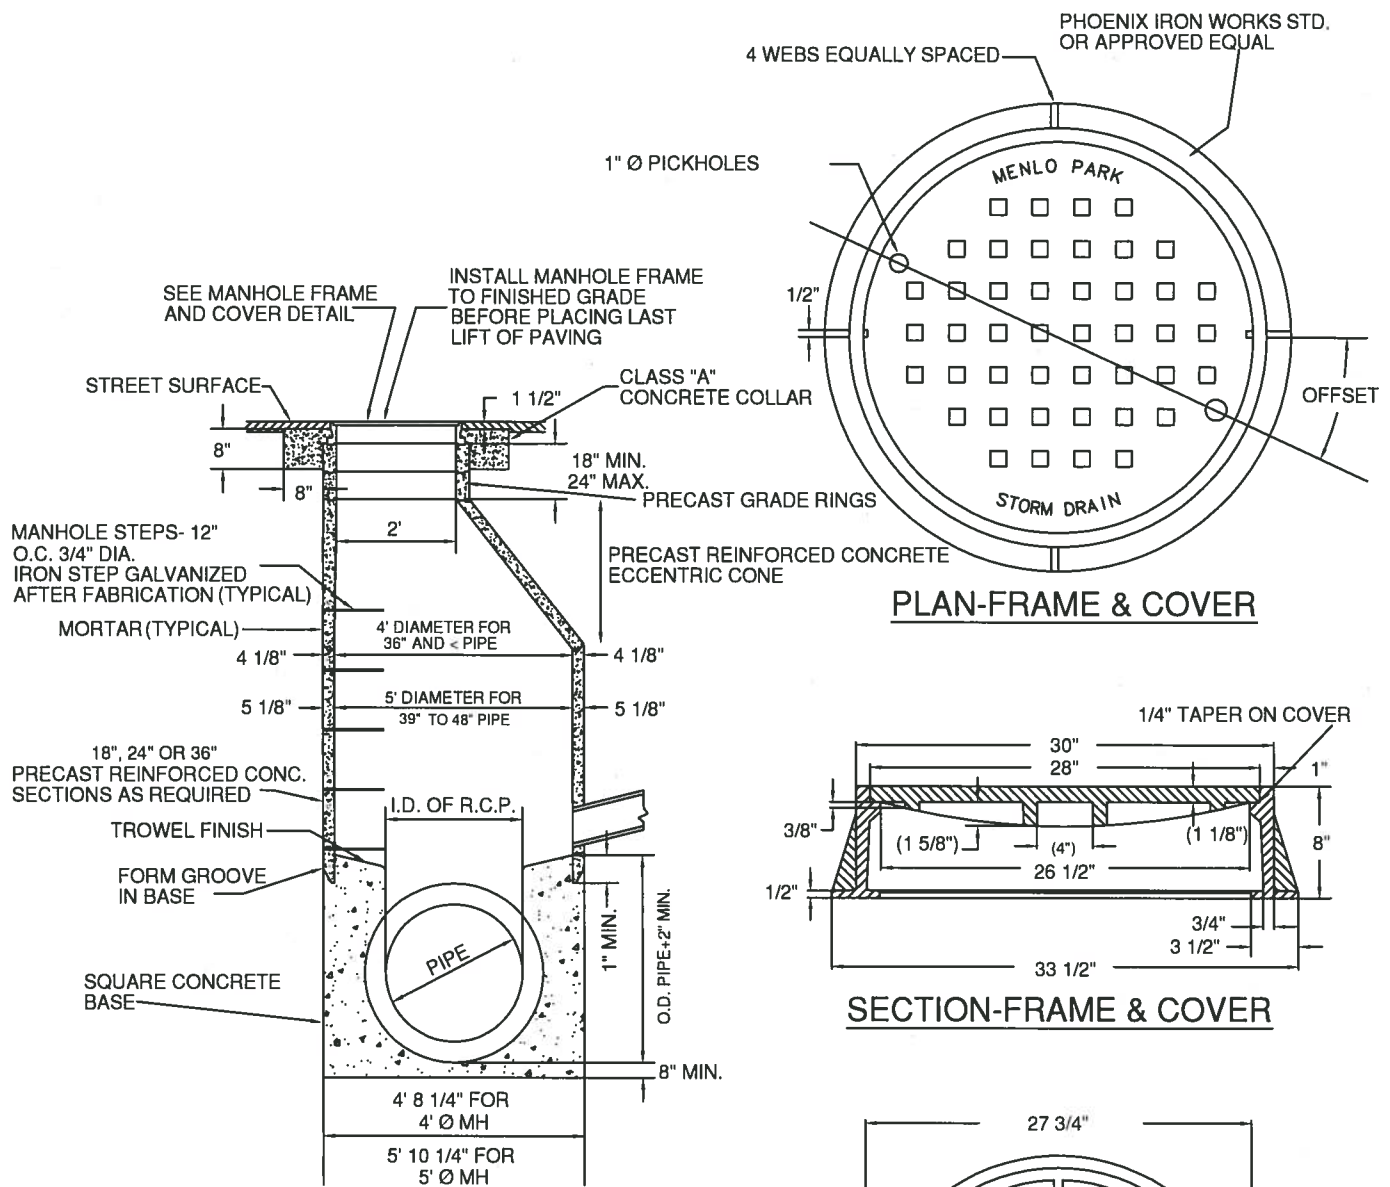

NOTES:

1. LAY PIPE THRU BOTTOM OF MANHOLES. AFTER CONCRETE IN BASE HAS SET, KNOCK OUT PORTION OF PIPE INDICATED WITH DASHED LINES.
2. STEPS TO BE INSTALLED AS SHOWN

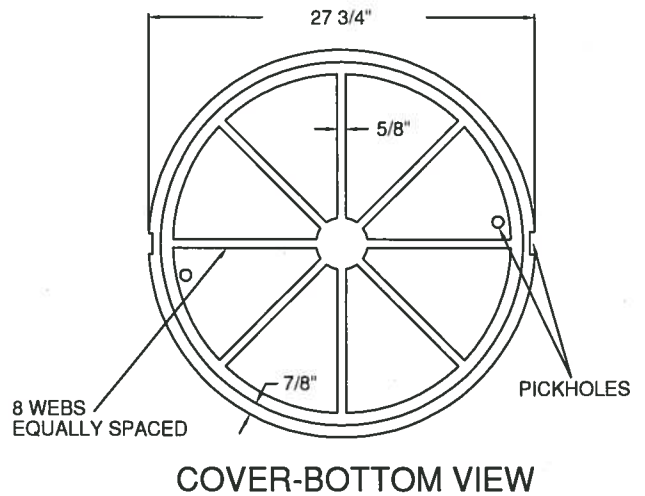

ACAD FILENAME:STORMAN



CITY OF MENLO PARK STANDARD DETAILS

NO.	REVISIONS	DATE

**STORM DRAIN MANHOLE
FRAME AND COVER
FOR PIPE I.D. ≤ 48"**

APPROVED 
Senior Engineer, R.C.E. No. 65727

DRAWN AL CHECKED VP

DATE 9/3/14

SCALE NTS

SHEET 1 OF 1

STD. DETAIL No.: DR-1